


1115 AIR SCREWDRIVER

EXPLODED VIEW

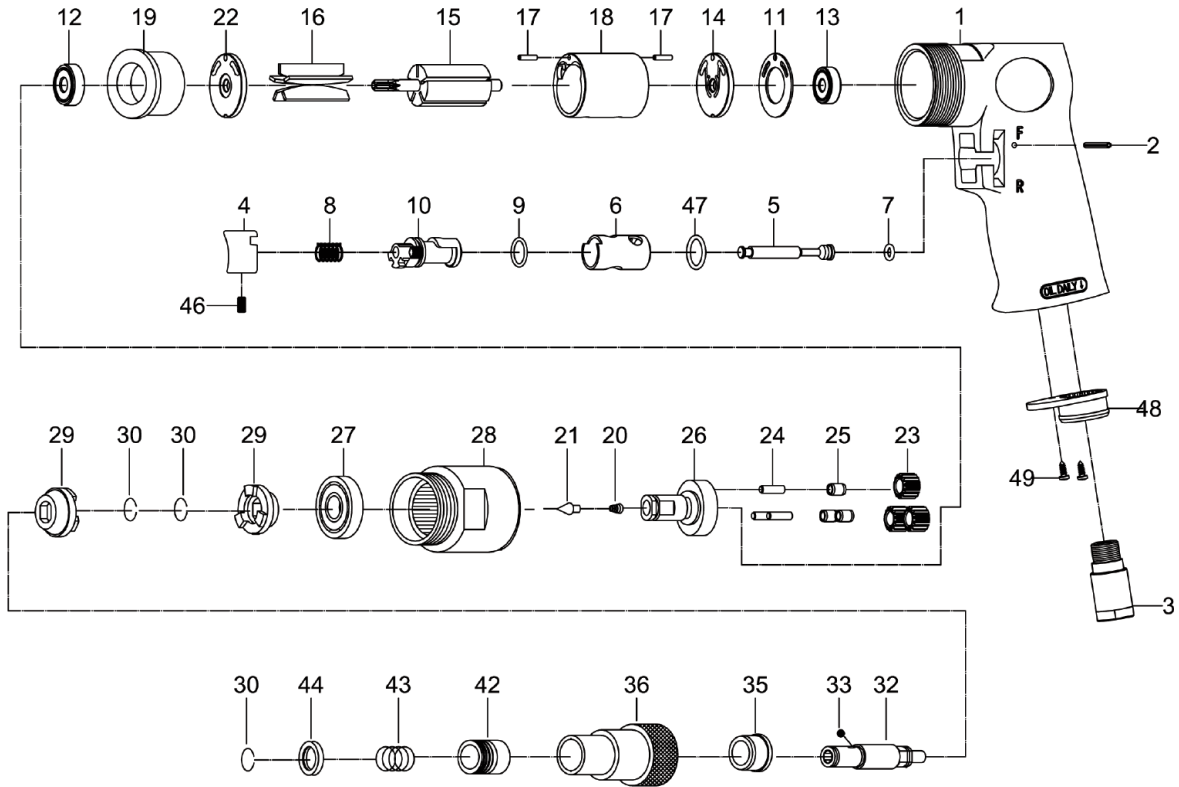

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	80201	Motor Housing	1	22	80414	End Plate	1
2	80202	Spring Pin	1	23	80223	Planet Gear	3
3	70103	Air Inlet	1	24	30124	Pin	3
4	70104	Trigger	1	25	80225	Bushing	3
5	80205	Valve Stem	1	26	80426	Work Spindle	1
6	80206	Reverse Bushing	1	27	080227	Ball Bearing	1
7	70107	O-Ring	1	28	80428	Clamp Nut	1
8	70108	Valve Spring	1	29	80429	Drive Dog	2
9	80209	O-Ring	1	30	80230	Retaining Ring	3
10	80210	Reverse Lever	1	32	80432	Cam Spindle	1
11	80211	Motor Gasket	1	33	40145	Steel Ball	1
12	030120	Ball Bearing	1	35	80435	Clutch Bushing	1
13	030113	Ball Bearing	1	36	80436	Clutch Housing	1
14	80214	End Plate	1	42	80242	Ball Retainer	1
15	80415	Rotor	1	43	80243	Spring	1
16	80216	Rotor Blades	5	44	80244	Washer	1
17	80217	Spring Pin	2	46	70935	Set Screw	1
18	80218	Cylinder	1	47	80247	O-Ring	1
19	80419	Front End Plate	1	48	70110	Exhaust Diffuser	1
20	80220	Spring	1	49	40309	Screw	2
21	80221	Spring Guide	1				

EAGLE

10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number and description.

FOOTNOTES