


5075/5077 TIRE BUFFER

EXPLODED VIEW

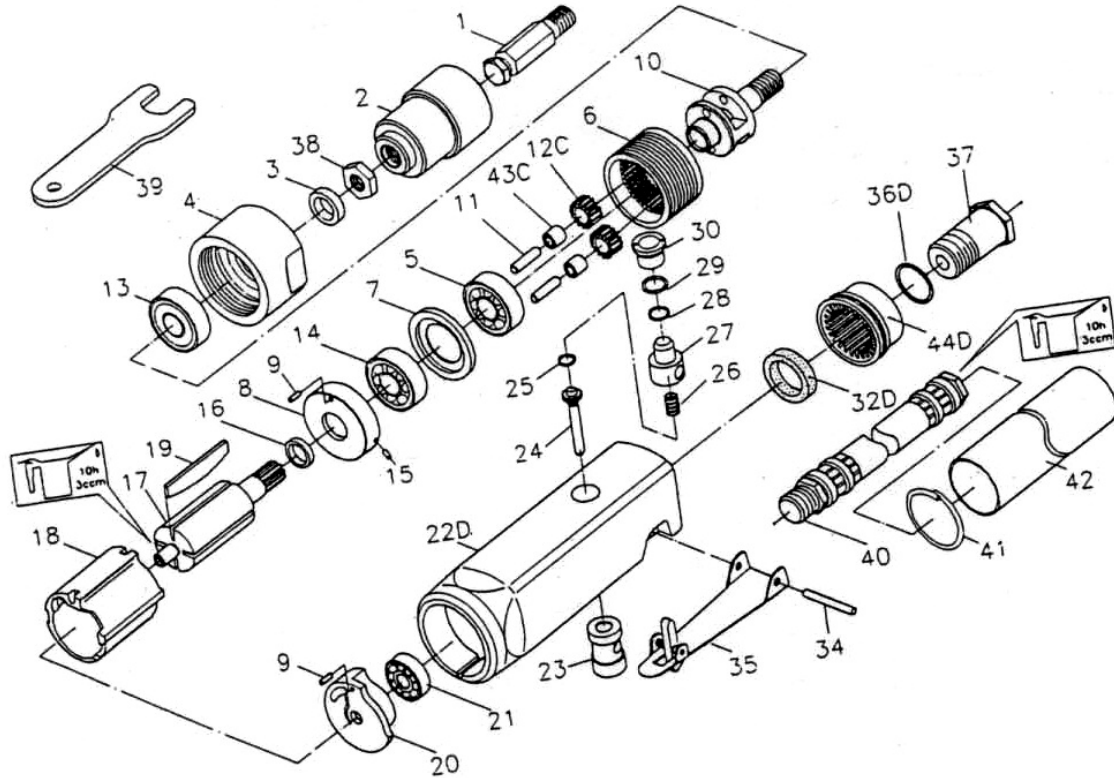

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
01	531-027-B	Spindle (Old#531-027)	1	19	216-021	Rotor Blade	4	37	216-034B	Air Inlet (1/4" PT)	1
		Incl.: #411-031 Quick Change	1	20	216-023	Rear End Plate	1		216-034C	Air Inlet (1/4" NPT)	
03	516-003	Spacer	1	21	00-2323	Ball Bearing	1	38	512-041	Nut	1
04	512-004	Housing Cover	1	22	512-025-B	Motor Housing	1	39	513-007	Spanner	1
05	00-2306	Ball Bearing	1	23	512-026	Bushing	1	40	301B-031A-D	Lead Hose	1
06	217-015	Idler Gear Housing	1	24	512-040	Valve Stem	1	41	216-035	Snap Ring	1
07	512-018	Spacer	1	25	00-4116	O-Ring	1	42	216-036	Exhaust Hose	1
08	511-019	Front End Plate	1	26	216-029	Spring	1	43	00-2405	Needle Bearing	2
09	00-3325	Spring Pin	2	27	512-039	Regulator	1	44	217-042	Hose Adapter	1
10	512-016-B	Cage	1	28	00-4102	O-Ring	1	45	00-4135	O-Ring	1
11	00-3405	Pin	2	29	00-4160	O-Ring	1				
12	516-017E	Idler Gear	2	30	512-030	Valve Plug	1				
13	00-2330	Ball Bearing	1	32	216-038B	Muffer	1				
14	00-2314	Ball Bearing	1	34	00-3341	Spring Pin	1				
15	00-3328	Spring Pin	1	35	511-031	Throttle Lever	1				
16	511-006	Spacer	1	36	00-4151	O-Ring	1				
17	512-020	Rotor	1		216-034A	Air Inlet (1/4" PF)					
18	511-022	Cylinder	1								

FOOTNOTES

EAGLE

10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number and description.