


5115 DIE GRINDER

EXPLODED VIEW

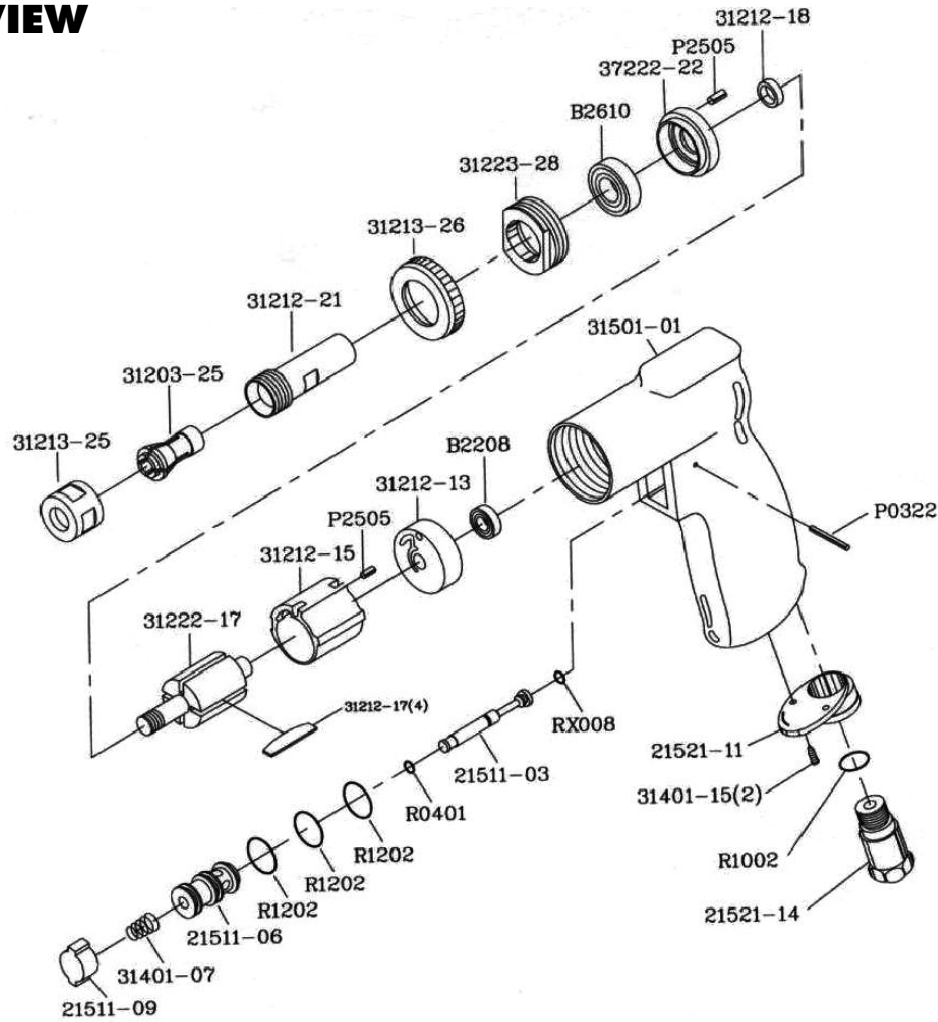

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
	31501-01	Motor Housing	1		31222-17	Rotor	1				
	RX008	O-Ring	1		31212-17	Rotor blade (4)	4				
	21511-03	Throttle Valve	1		31212-18	Rotor Collar	1				
	R0401	O-ring	1		37222-22	Front end plate	1				
	R1202	O-ring (3)	3		B2610	Bearing	1				
	21511-06	Valve Bushing	1		31223-28	Lock Nut	1				
	31401-07	Valve Spring	1		31213-26	Housing Cap	1				
	21511-09	Trigger	1		31212-21	Spindle	1				
	P0322	Spring pin	1		31203-25	Collet	1				
	21521-11	Exhaust diffuser	1		31213-25	Collet nut	1				
	31401-15	Muffler screw (2)	2		W0019	19MM Spanner wrench	1				
	R1002	O-ring	1		W0014	14MM Spanner wrench	1				
	21521-14	Inlet Bushing	1								
	B2208	Bearing	1								
	31212-13	Rear End Plate	1								
	P2505	Spring pin (2)	2								
	31212-15	Cylinder	1								

FOOTNOTES



When ordering spare parts, please specify tool type, part number and description.
10000 SE PINE ST., PORTLAND, OR 97216
503-254-6600 FAX 503-254-7215