


AE-2015 ELECTRIC SCREWDRIVER

EXPLODED VIEW

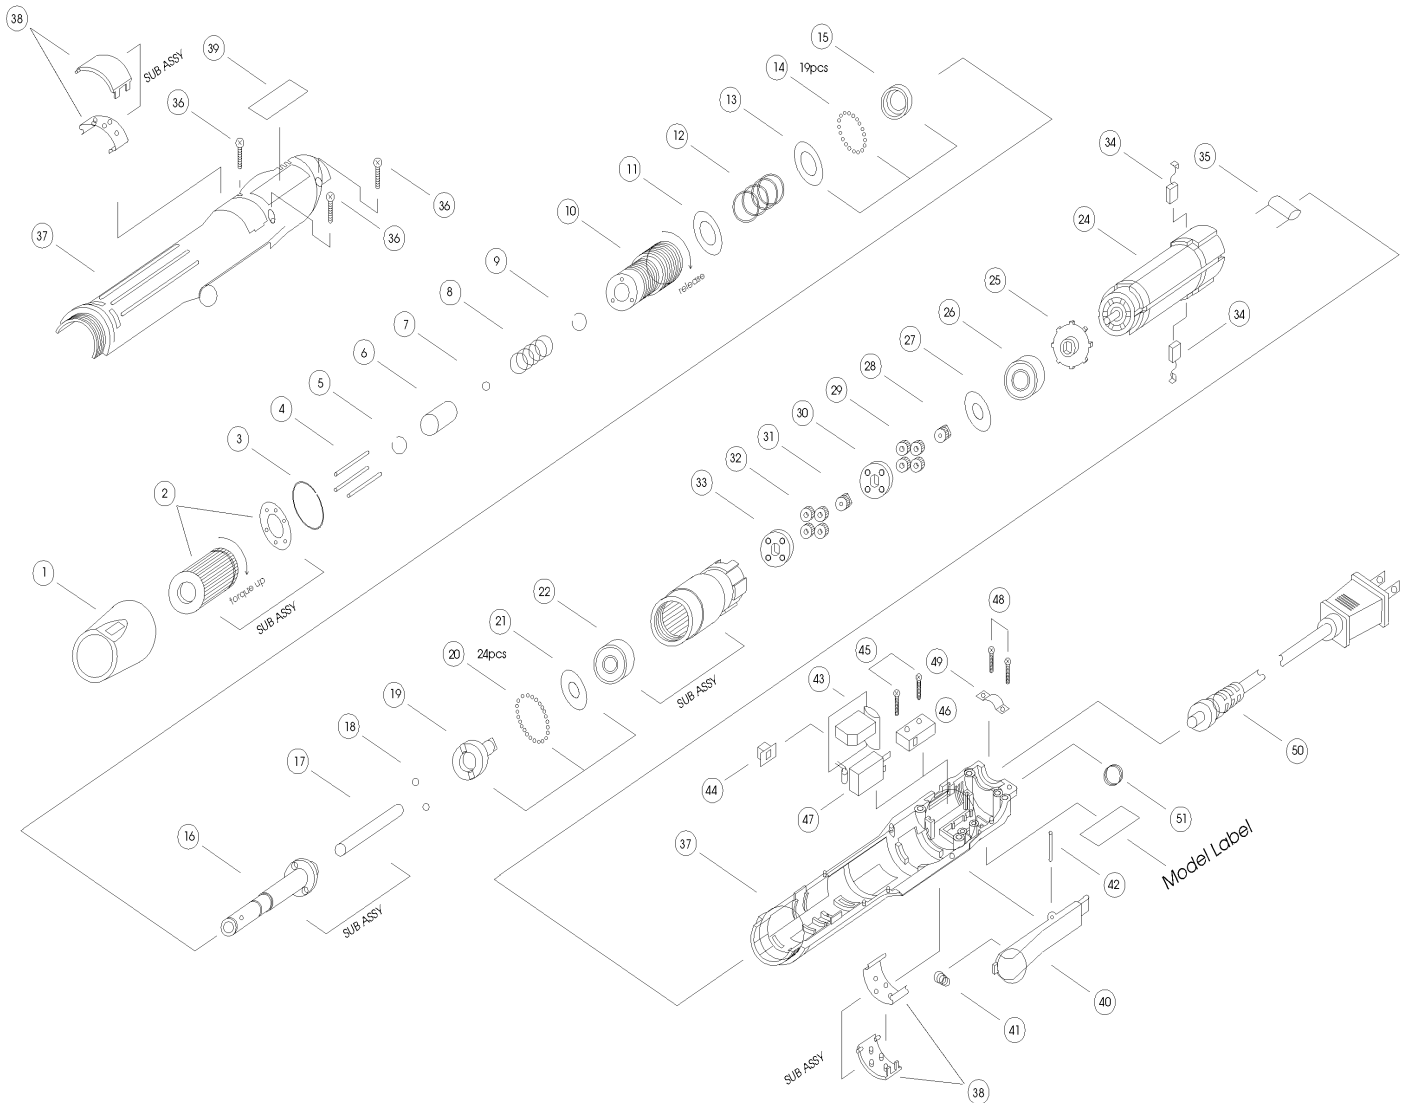

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	6H1041	RETAINING RING	1	24	2M5031	MOTOR	1	45	8T2047	SCREW	2
2	4A4010	REGULATING HANDLE SUB ASSEMBLY	1	25	6R2021	FAN	1	46	2S3012	MICRO SWITCH	1
3	4U1056	SNAP RING	1	26	4E1018	BALL BEARING	1	47	2F3011	PROTECTOR	1
4	4N1025	PUSH PIN	3	27	4W3012	WASHER	1	48	8T2666	SCREW	2
5	4U1051	SNAP RING	1	28	4G1611	DRIVING GEAR	1	49	6R6013	CABLE CLIP	1
6	4H2043	BIT SLIDE SLEEVE	1	29	4G2811	FIRST PLANET GEAR	4	50	2W1027	POWER CORD	1
7	4B2015	BALL	1	30	4L1812	FIRST GEAR CAGE	1	51	4F1023	HANGER RING	1
8	4S3064	SLEEVE SPRING	1	31	4G3061	GEAR	1	52	7L1331-0	MODEL LABEL	1
9	4U1051	SNAP RING	1	32	4G2036	SECOND PLANET GEAR	4	53	8T1527	SCREW	1
10	4T1081	HAMMER CASING	1	33	4L1812	SECOND GEAR CAGE	1				
11	4W3212	PUSH WASHER	1	34	2B1014	BRUSH	2				
12	4S1042	SPRING	1	35	2C6712	CONDENSER	1				
13	4W3212	PUSH WASHER	1	36	8T2690	TAPPING SCREW	3				
14	4B1024	BALL	19	37	6Z1072	PLASTIC HOUSING (L+R)	1				
15	4E2016	BALL BEARING	1	38	6A2011	CARBON MAINTANCE BONNET SUB ASSEMBLY	2				
16	4A2018	ANVIL SUB ASSEMBLY	1	39	7L3015	CAUTION LABEL	1				
18	4B1029	BALL	2	40	6P3013	TRIGGER	1				
19	4K1062	HAMMER	1	41	4S3051	SPRING	1				
20	4B1024	BALL	24	42	4N1017	PIN	1				
21	4W3213	WASHER	1	43	2A6016	PWB SUB ASSEMBLY	1				
22	4A7019	GEAR HOUSING SUB ASSEMBLY	1	44	6V1033	PUSH BUTTON	1				



AIMCO

When ordering spare parts, please specify tool type, part number and description.

10000 SE PINE, PORTLAND, OR 97216
503-254-6600 FAX 503-255-2615

FOOTNOTES