


EPTS-34008P-25Q TORQUE CONTROLLED SCREWDRIVER

EXPLODED VIEW

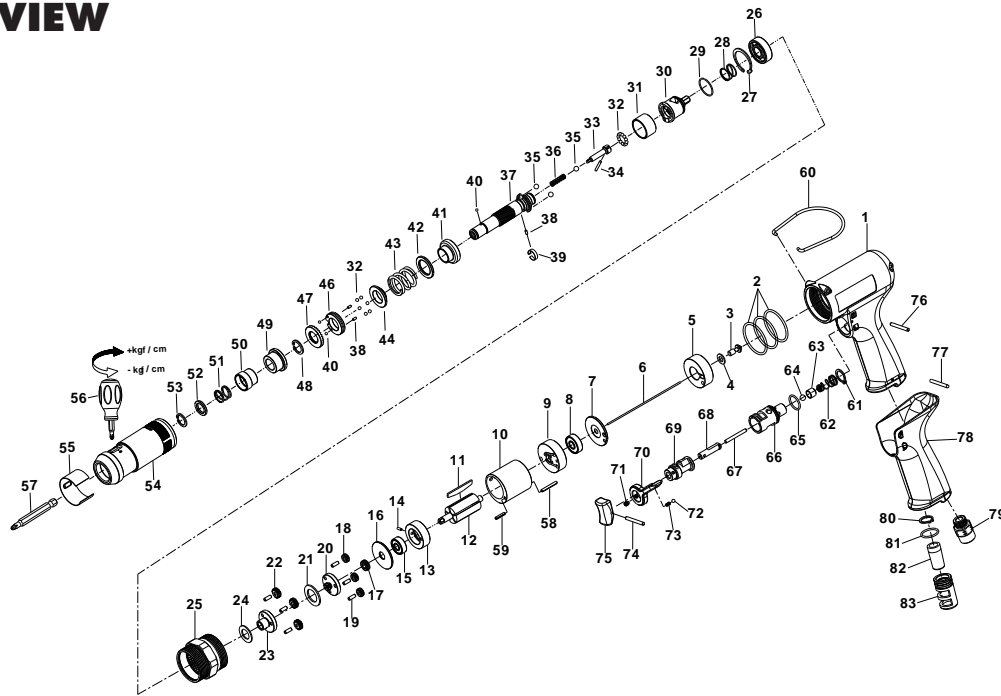

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty	Index Number	Part Number	Description	Qty.
1	EPTS-34008P-25Q-1	Motor Housing	1	44	EPTS-34008P-25Q-44	Spring Collar	1
2	EPTS-34008P-25Q-2	O-Ring	3	46	EPTS-34008P-25Q-46	Adjustment Lock Ring	1
3	EPTS-34008P-25Q-3	Shut-off Valve	1	47	EPTS-34008P-25Q-47	Adjustment Nut	1
4	EPTS-34008P-25Q-4	Washer	1	48	EPTS-34008P-25Q-48	Retainer	1
5	EPTS-34008P-25Q-5	Handle Bushing	1	49	EPTS-34008P-25Q-49	Bushing	1
6	EPTS-34008P-25Q-6	Throttle Valve Plunger	1	50	EPTS-34008P-25Q-50	Release Sleeve	1
7	EPTS-34008P-25Q-7	Rear Plate Space	1	51	EPTS-34008P-25Q-51	Spring	1
8	EPTS-34008P-25Q-8	Ball Bearing	1	52	EPTS-34008P-25Q-52	Washer	1
9	EPTS-34008P-25Q-9	Rear End Plate	1	53	EPTS-34008P-25Q-53	Retainer	1
10	EPTS-34008P-25Q-10	Cylinder	1	54	EPTS-34008P-25Q-54	Clutch Housing	1
11	EPTS-34008P-25Q-11	Rotor Blade	5	55	EPTS-34008P-25Q-55	Rubber Ring	1
12	EPTS-34008P-25Q-12	Rotor	1	56	EPTS-34008P-25Q-56	Screwdriver	1
13	EPTS-34008P-25Q-13	Front End Plate	1	57	EPTS-34008P-25Q-57	Bit (Option)	1
14	EPTS-34008P-25Q-14	Spring Pin	1	58	EPTS-34008P-25Q-58	Spring Pin	1
15	EPTS-34008P-25Q-15	Ball Bearing	1	59	EPTS-34008P-25Q-59	Spring Pin	1
16	EPTS-34008P-25Q-16	Washer	1	60	EPTS-34008P-25Q-60	Hanger	1
17	EPTS-34008P-25Q-17	Pinion Gear	1	61	EPTS-34008P-25Q-61	Retainer	1
18	EPTS-34008P-25Q-18	Planet Gear	3	62	EPTS-34008P-25Q-62	Throttle Valve Spring	1
19	EPTS-34008P-25Q-19	Pin	6	63	EPTS-34008P-25Q-63	Throttle Valve	1
20	EPTS-34008P-25Q-20	Rear Gear Head	1	64	EPTS-34008P-25Q-64	Steel Ball	1
21	EPTS-34008P-25Q-21	Washer	1	65	EPTS-34008P-25Q-65	O-Ring	1
22	EPTS-34008P-25Q-22	Planet Gear	3	66	EPTS-34008P-25Q-66	Bushing	1
23	EPTS-34008P-25Q-23	Front Gear Head	1	67	EPTS-34008P-25Q-67	Pin	1
24	EPTS-34008P-25Q-24	Washer	1	68	EPTS-34008P-25Q-68	Trigger Pin	1
25	EPTS-34008P-25Q-25	Gear Housing	1	69	EPTS-34008P-25Q-69	Reverse Valve	1
26	EPTS-34008P-25Q-26	Ball Bearing	1	70	EPTS-34008P-25Q-70	Everse Knob	1
27	EPTS-34008P-25Q-27	Retainer	1	71	EPTS-34008P-25Q-71	Screw	1
28	EPTS-34008P-25Q-28	Spring	1	72	EPTS-34008P-25Q-72	Steel Ball	1
29	EPTS-34008P-25Q-29	Retainer	1	73	EPTS-34008P-25Q-73	Spring	1
30	EPTS-34008P-25Q-30	Rear Clutch	1	74	EPTS-34008P-25Q-74	Spring Pin	1
31	EPTS-34008P-25Q-31	Ball Holder	1	75	EPTS-34008P-25Q-75	Trigger	1
32	EPTS-34008P-25Q-32	Steel Ball	4	76	EPTS-34008P-25Q-76	Pin	1
33	EPTS-34008P-25Q-33	Pilot Pin	1	77	EPTS-34008P-25Q-77	Pin	1
34	EPTS-34008P-25Q-34	Pin	1	78	EPTS-34008P-25Q-78	Rubber Grip	1
35	EPTS-34008P-25Q-35	Steel Ball	3	79	EPTS-34008P-25Q-79	Air Inlet	1
36	EPTS-34008P-25Q-36	Spring	1	80	EPTS-34008P-25Q-80	Retainer	1
37	EPTS-34008P-25Q-37	Standard Anvil	1	81	EPTS-34008P-25Q-81	O-Ring	1
38	EPTS-34008P-25Q-38	Pin	3	82	EPTS-34008P-25Q-82	Muffler	1
39	EPTS-34008P-25Q-39	Band	1	83	EPTS-34008P-25Q-83	Exhaust Deflector	1
40	EPTS-34008P-25Q-40	Steel Ball	3				
41	EPTS-34008P-25Q-41	Central Clutch	1	TK	EPTS-34008P-25Q-TK	Tune-Up Kit { incl. 2 (3).11 (5).28.32 (18).35 (3).36.40 (3).43.51.62.64.65.72.73.81 }	
42	EPTS-34008P-25Q-42	Washer	1				
43	EPTS-34008P-25Q-43	Torque Setting Spring	1				

FOOTNOTES



10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number and description.