


EPTS-35017P-25Q 1/4" AUTO SHUTOFF AIR SCREWDRIVER

EXPLODED VIEW

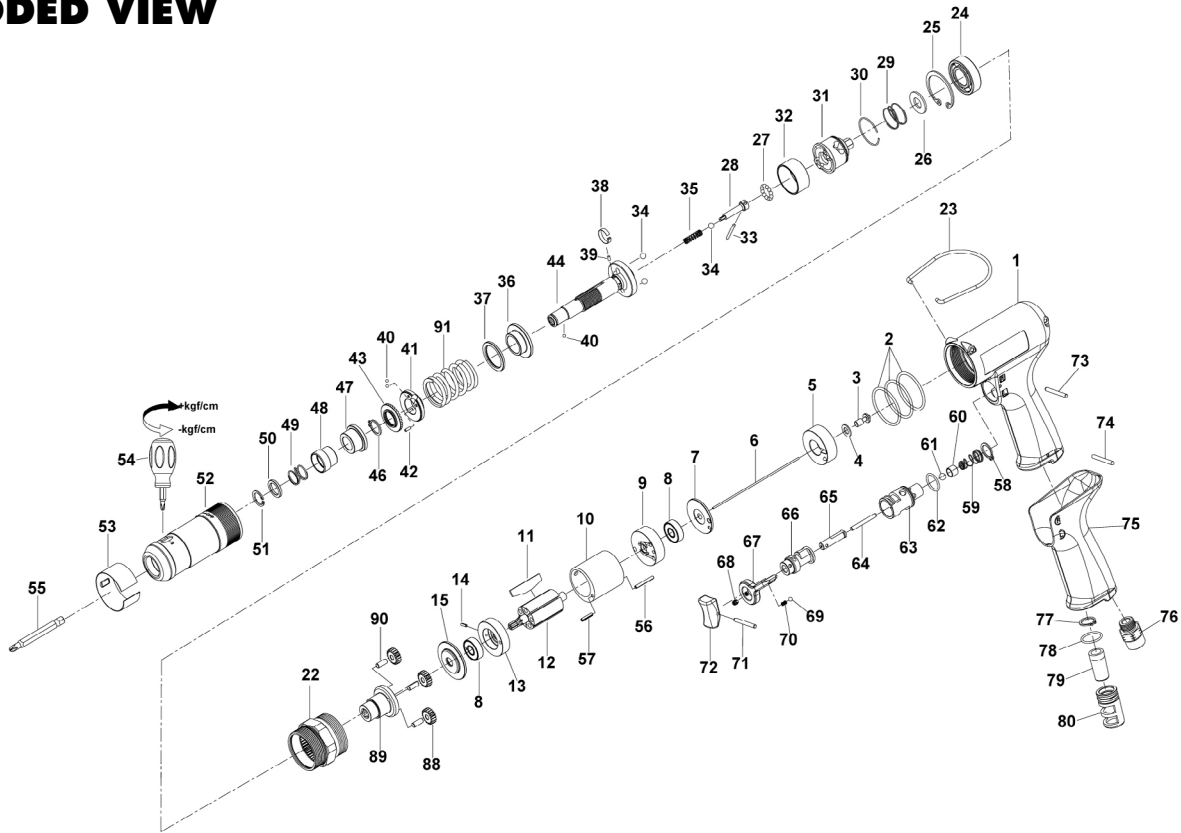

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	35117-PLWA-01	Housing	1	33	35117-PLWA-33	Pin	1	59	35117-PLWA-59	Throttle Valve Spring	1 ●
2	35117-PLWA-02	O-Ring	3 ●	34	35117-PLWA-34	Steel Ball	3 ●	60	35117-PLWA-60	Throttle Valve	1
3	35117-PLWA-03	Shut-off Valve	1	35	35117-PLWA-35	Spring	1 ●	61	35117-PLWA-61	Steel Ball	1 ●
4	35117-PLWA-04	Washer	1	36	35117-PLWA-36	Central Clutch	1	62	35117-PLWA-62	O-Ring	1 ●
5	35117-PLWA-05	Handle Bushing	1	37	35117-PLWA-37	Washer	1	63	35117-PLWA-63	Bushing	1
6	35117-PLWA-06	Throttle Valve Plunger	1	38	35117-PLWA-38	Band	1	64	35117-PLWA-64	Pin	1
7	35117-PLWA-07	Rear Plate Spacer	1	39	35117-PLWA-39	Pin	1	65	35117-PLWA-65	Trigger Pin	1
8	982-066-0	Ball Bearing #607ZZ	2	40	35117-PLWA-40	Steel Ball	3 ●	66	35117-PLWA-66	Reverse Valve	1
9	35117-PLWA-09	Rear End Plate	1	41	35117-PLWA-41	Adjustment Lock Ring	1	67	35117-PLWA-67	Reverse Knob	1
10	35117-PLWA-10	Cylinder	1	42	35117-PLWA-42	Pin	1	68	35117-PLWA-68	Screw	1
11	35117-PLWA-11	Rotor Blade	5 ●	43	35117-PLWA-43	Adjustment Nut	1	69	35117-PLWA-69	Steel Ball	1 ●
12	35117-PLWA-12	Rotor	1	44	35117-PLWA-44	Standard Anvil	1	70	35117-PLWA-70	Spring	1 ●
13	35117-PLWA-13	Front End Plate	1	46	35117-PLWA-46	Retainer	1	71	35117-PLWA-71	Spring Pin	1
14	35117-PLWA-14	Spring Pin	1	47	35117-PLWA-47	Bushing	1	72	35117-PLWA-72	Trigger	1
15	35117-PLWA-15	Washer	1	48	35117-PLWA-48	Release Sleeve	1	73	35117-PLWA-73	Pin	1
22	35117-PLWA-22	Gear Housing	1	49	35117-PLWA-49	Spring	1 ●	74	35117-PLWA-74	Pin	1
23	35117-PLWA-23	Hanger	1	50	35117-PLWA-50	Washer	1	75	35117-PLWA-75	Rubber Grip	1
24	982-142-0	Ball Bearing #6002	1	51	35117-PLWA-51	Retainer	1	76	35117-PLWA-76	Air Inlet	1
25	35117-PLWA-25	Retainer	1	52	35117-PLWA-52	Clutch Housing	1	77	35117-PLWA-77	Retainer	1
26	35117-PLWA-26	Washer	1	53	35117-PLWA-53	Rubber Ring	1	78	35117-PLWA-78	O-Ring	1 ●
27	35117-PLWA-27	Steel Ball	12 ●	54	35117-PLWA-54	Torque Controlled	1	79	35117-PLWA-79	Muffler	1
28	35117-PLWA-28	Pilot Pin	1	55	35117-PLWA-55	Screw Drive	1	80	35117-PLWA-80	Exhaust Deflector	1
29	35117-PLWA-29	Spring	1 ●	56	35117-PLWA-56	Spring Pin	1	88	35117-PLWA-88	Planet Gear	3
30	35117-PLWA-30	Retainer	1	57	35117-PLWA-57	Spring Pin	1	89	35117-PLWA-89	Work Spindle	1
31	35117-PLWA-31	Rear Clutch	1	58	35117-PLWA-58	Retainer	1	90	35117-PLWA-90	Pin	3
32	35117-PLWA-32	Ball Holder	1					91	35117-PLWA-91	Torque Setting Spring	1 ●



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number, and description

FOOTNOTES

● = Included in KI-35117-PLWA-TK Tune Up Kit